



RIGOL

# DHO4000 Series

Digital Oscilloscope

Performance Verification

Apr. 2023



## **Guaranty and Declaration**

### **Copyright**

© 2023 RIGOL TECHNOLOGIES CO., LTD. All Rights Reserved.

### **Trademark Information**

RIGOL® is the trademark of RIGOL TECHNOLOGIES CO., LTD.

### **Notices**

- RIGOL products are covered by P.R.C. and foreign patents, issued and pending.
- RIGOL reserves the right to modify or change parts of or all the specifications and pricing policies at the company's sole decision.
- Information in this publication replaces all previously released materials.
- Information in this publication is subject to change without notice.
- RIGOL shall not be liable for either incidental or consequential losses in connection with the furnishing, use, or performance of this manual, as well as any information contained.
- Any part of this document is forbidden to be copied, photocopied, or rearranged without prior written approval of RIGOL.

### **Product Certification**

RIGOL guarantees that this product conforms to the national and industrial standards in China as well as the ISO9001:2015 standard and the ISO14001:2015 standard. Other international standard conformance certifications are in progress.

### **Contact Us**

If you have any problem or requirement when using our products or this manual, please contact RIGOL.

E-mail: [service@rigol.com](mailto:service@rigol.com)

Website: <http://www.rigol.com>

Section	Description	Page
	List of Figures.....	III
	List of Tables.....	IV
1	Safety Requirement.....	1
1.1	General Safety Summary.....	1
1.2	Safety Notices and Symbols.....	2
2	Specifications.....	4
3	Document Overview.....	6
4	Overview.....	8
4.1	Test Preparations.....	8
4.2	Test Result Record.....	9
4.3	Specifications.....	10
5	Performance Verification Test.....	11
5.1	Random Noise Test.....	11
5.1.1	Specification.....	11
5.1.2	Test Procedures.....	12
5.1.3	Test Record From.....	13
5.2	Impedance Test.....	14
5.2.1	Specification.....	14
5.2.2	Test Connection Diagram.....	15
5.2.3	Test Procedures.....	15
5.2.4	Test Record From.....	16
5.3	Input Capacitance Test.....	17
5.3.1	Specification.....	17
5.3.2	Test Connection Diagram.....	17
5.3.3	Test Procedures.....	17
5.3.4	Test Record From.....	18
5.4	DC Gain Accuracy Test.....	18
5.4.1	Specification.....	18
5.4.2	Test Connection Diagram.....	19
5.4.3	Test Procedures.....	19
5.4.4	Test Record From.....	21
5.5	DC Offset Accuracy Test.....	24
5.5.1	Specification.....	24

---

5.5.2	Test Connection Diagram.....	24
5.5.3	Test Procedures.....	24
5.5.4	Test Record From.....	25
5.6	Bandwidth Test.....	28
5.6.1	Specification.....	28
5.6.2	Test Connection Diagram.....	28
5.6.3	Test Procedures.....	28
5.6.4	Test Record From.....	31
5.7	Time Base Accuracy Test.....	32
5.7.1	Specification.....	32
5.7.2	Test Connection Diagram.....	32
5.7.3	Test Procedures.....	32
5.7.4	Test Record From.....	34
6	Appendix: Test Record Form.....	35

# List of Figures

Figure 4.1 Self-calibration Menu .....	9
Figure 5.1 Input Impedance Test Connection Diagram .....	15
Figure 5.2 Input Capacitance Test Connection Diagram .....	17
Figure 5.3 DC Gain Accuracy Test Connection Diagram .....	19
Figure 5.4 DC Offset Accuracy Test Connection Diagram .....	24
Figure 5.5 Bandwidth Test Connection Diagram .....	28
Figure 5.6 Time Base Accuracy Test Connection Diagram .....	32

# List of Tables

Table 2.1 Specifications .....	4
Table 5.1 Test Devices .....	11

# 1 Safety Requirement

---

## 1.1 General Safety Summary

---

Please review the following safety precautions carefully before putting the instrument into operation so as to avoid any personal injury or damage to the instrument and any product connected to it. To prevent potential hazards, please follow the instructions specified in this manual to use the instrument properly.

- **Use Proper Power Cord.**

Only the power cord designed for the instrument and authorized for use within the local country could be used.

- **Ground the Instrument.**

The instrument is grounded through the Protective Earth lead of the power cord. To avoid electric shock, connect the earth terminal of the power cord to the Protective Earth terminal before connecting any input or output terminals.

- **Connect the Probe Correctly.**

If a probe is used, the probe ground lead must be connected to earth ground. Do not connect the ground lead to high voltage. Improper way of connection could result in dangerous voltages being present on the connectors, controls or other surfaces of the oscilloscope and probes, which will cause potential hazards for operators.

- **Observe All Terminal Ratings.**

To avoid fire or shock hazard, observe all ratings and markers on the instrument and check your manual for more information about ratings before connecting the instrument.

- **Use Proper Overvoltage Protection.**

Ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the operator might be exposed to the danger of an electric shock.

- **Do Not Operate Without Covers.**

Do not operate the instrument with covers or panels removed.

- **Do Not Insert Objects Into the Air Outlet.**

Do not insert objects into the air outlet, as doing so may cause damage to the instrument.

- **Use Proper Fuse.**

Please use the specified fuses.

- **Avoid Circuit or Wire Exposure.**

Do not touch exposed junctions and components when the unit is powered on.
- **Do Not Operate With Suspected Failures.**

If you suspect that any damage may occur to the instrument, have it inspected by RIGOL authorized personnel before further operations. Any maintenance, adjustment or replacement especially to circuits or accessories must be performed by RIGOL authorized personnel.
- **Provide Adequate Ventilation.**

Please use the specified fuses. Avoid Circuit or Wire Exposure.
- **Do Not Operate in Wet Conditions.**

To avoid short circuit inside the instrument or electric shock, never operate the instrument in a humid environment.
- **Do Not Operate in an Explosive Atmosphere.**

To avoid personal injuries or damage to the instrument, never operate the instrument in an explosive atmosphere.
- **Keep Product Surfaces Clean and Dry.**

To avoid dust or moisture from affecting the performance of the instrument, keep the surfaces of the instrument clean and dry.
- **Prevent Electrostatic Impact.**

Operate the instrument in an electrostatic discharge protective environment to avoid damage induced by static discharges. Always ground both the internal and external conductors of cables to release static before making connections.
- **Proper Use of Battery.**

Do not expose the battery (if available) to high temperature or fire. Keep it out of the reach of children. Improper change of battery (note: lithium battery) may cause explosion. Use the RIGOL specified battery only.
- **Handle with Caution.**

Please handle with care during transportation to avoid damage to keys, knob interfaces and other parts on the panels.

## 1.2 Safety Notices and Symbols

### Safety Notices in this Manual:



#### **WARNING**

Indicates a potentially hazardous situation or practice which, if not avoided, will result in serious injury or death.



**CAUTION**

Indicates a potentially hazardous situation or practice which, if not avoided, could result in damage to the product or loss of important data.

**Safety Notices on the Product:****• DANGER**

It calls attention to an operation, if not correctly performed, could result in injury or hazard immediately.

**• WARNING**

It calls attention to an operation, if not correctly performed, could result in potential injury or hazard.

**• CAUTION**

It calls attention to an operation, if not correctly performed, could result in damage to the product or other devices connected to the product.

**Safety Symbols on the Product:**


**Hazardous  
Voltage**



**Safety Warning**



**Protective Earth  
Terminal**

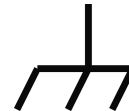

**Chassis Ground**



**Test Ground**

## 2 Specifications

This chapter lists the technical specifications of the DHO4000 series oscilloscope.

DHO4000 series digital oscilloscope achieves 4 GSa/s sample rate, a fast waveform capture rate of 1,500,000 wfms/s with the UltraAcquire mode, 500 Mpts memory depth, 12-bit vertical resolution, all combined with excellent noise floor performance and vertical accuracy to meet your requirements for more accurate measurements, bringing extraordinary T&M experience for you.

To meet specifications, these conditions must be met:

- The instrument must have been calibrated in an ambient temperature between 18°C and 28°C.
- The instrument must be operating within the environmental limits. (For the specific environment requirements, refer to *DHO4000 Data Sheet*).
- The instrument must be powered from a source that meets the requirement for the power supply. (For the power specifications, refer to *DHO4000 Data Sheet*).
- The instrument must have been operating continuously for at least 30 minutes within the specified operating temperature range.

The following table shows some of the technical specifications of DHO4204, DHO4404, and DHO4804. For other technical specifications of DHO4000, please refer to *DHO4000 Data Sheet*.

**Table 2.1 Specifications**

Overview of the DHO4000 Series Technical Specifications			
Model	DHO4204	DHO4404	DHO4804
Analog Bandwidth (50 $\Omega$ , -3 dB)	200 MHz	400 MHz	800 MHz
Analog Bandwidth (1 M $\Omega$ , -3 dB)	200 MHz	400 MHz	500 MHz
No. of Input Channels	4 analog channel inputs, 1 EXT channel input		
Input Coupling	DC, AC, or GND		
Input Impedance	1 M $\Omega$ $\pm$ 1%, 50 $\Omega$ $\pm$ 1%		
Sampling Mode	Real-time sampling		
Bandwidth Limit	20 MHz, 250 MHz, FULL; selectable for each channel		

Overview of the DHO4000 Series Technical Specifications	
Max. Analog Channel Sample Rate	4 GSa/s (single channel <sup>[1]</sup> ), 2 GSa/s (half channels <sup>[2]</sup> ), 1 GSa/s (all channels <sup>[3]</sup> )  Note: The sample rate reaches 1 GSa/s when all channels are enabled. For DHO4804, the maximum analog bandwidth is only 400 MHz.
Max. Memory Depth	Standard: 250 Mpts (single channel <sup>[1]</sup> ), 125 Mpts (half channels <sup>[2]</sup> ), 62.5 Mpts (all channels <sup>[3]</sup> )  Optional: 500 Mpts (single channel <sup>[1]</sup> ), 250 Mpts (half channels <sup>[2]</sup> ), 125 Mpts (all channels <sup>[3]</sup> )
Max. Waveform Capture Rate	50,000 wfms/s (Vector Mode)  1,500,000 wfms/s (UltraAcquire Mode)
Vertical Resolution	12 bits
DC Gain Accuracy	±2% Full Scale
Time Base Accuracy	±0.5 ppm ± 1 ppm/year
Trigger Source	Analog channel (1-4), EXT TRIG, and AC Line

**NOTE**

[1]: If any one of the channels is enabled, it is called single channel mode.

[2]: If two of the channels are enabled, it is called half channels mode.

[3]: If any three channels or all four channels are enabled, it is called all channels mode.

## 3 Document Overview

This manual is designed to guide you to properly test the performance specifications of RIGOL DHO4000 series digital oscilloscope. For the operation methods mentioned in the test procedures, refer to User Guide of this product.



### TIP

For the latest version of this manual, download it from the official website of RIGOL (<http://www.rigol.com>).

### Publication Number


PVA33100-1110

### Software Version

Software upgrade might change or add product features. Please acquire the latest version of the manual from RIGOL website or contact RIGOL to upgrade the software.

### Format Conventions in this Manual

#### 1. Key


The front panel key is denoted by the menu key icon. For example,  indicates the "Default" key.

#### 2. Menu

The menu item is denoted by the format of "Menu Name (Bold) + Character Shading" in the manual. For example, **Setup** indicates the "Setup" sub-menu under the "Utility" function menu. You can click or tap **Setup** to access the "Setup" menu.

#### 3. Operation Procedures

The next step of the operation is denoted by ">" in the manual. For example, 

> **Storage** indicates first clicking or tapping  and then clicking or tapping **Storage**.

#### 4. Connector

The front/rear panel connector is denoted by "Brackets + Connector Name (Bold)", for example, **[AUX OUT]**.

### Content Conventions in this Manual

DHO4000 series digital oscilloscope includes the following models. Unless otherwise specified, this manual takes DHO4804 as an example to illustrate the methods for the performance verification of DHO4000 series.

---

<b>Model</b>	<b>Max. Analog Bandwidth</b>	<b>No. of Analog Channels</b>
DHO4204	200 MHz	4
DHO4404	400 MHz	4
DHO4804	800 MHz	4



## 4 Overview

### 4.1 Test Preparations

Before the test, make the following preparations.

1. Self-test
2. Warm-up (make sure that the instrument has been running for at least 30 minutes)
3. Self-calibration

#### Self-test

After the instrument is connected to the power source, press the power key  at the lower-left corner of the front panel to power on the instrument. You can also click or tap  > **Utility** > **Setup**. Then select "Switch On" for the **Power status** menu. After the instrument is connected to power source, it will start directly.


During the start-up process, the instrument performs a series of self-tests. After the self-test, the splash screen is displayed.

If the oscilloscope cannot start normally, refer to the "Troubleshooting" chapter in *DHO4000 User Guide* to locate the problem and resolve it. Do not perform self-calibration or performance tests until the instrument passes the self-test.

#### Self-calibration

The self-calibration program can quickly make the oscilloscope work in an optimal state to get the precise measurement results. You can perform self-calibration at any time, especially when the changes of the ambient temperature reach or above 5°C. Make sure that the oscilloscope has been warmed up or operating for more than 30 minutes before the self-calibration.

1. Disconnect all the input channels.
2. In "Utility" menu, click or tap **SelfCal**. The self-calibration interface will be displayed as shown below.

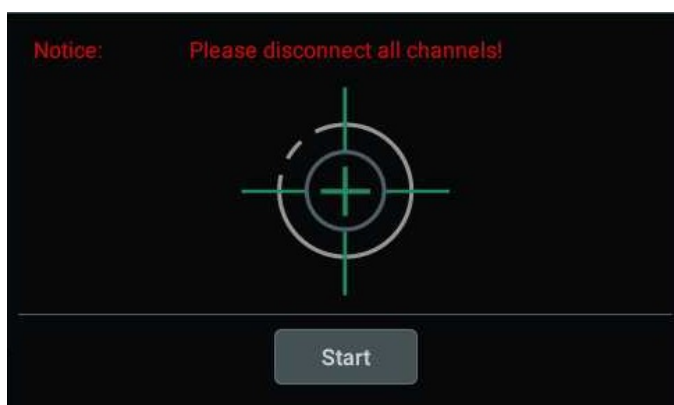

**Figure 4.1 Self-calibration Menu**

- Click or tap **Start**, and then the oscilloscope will start to execute the self-calibration program.
  - After starting the self-calibration program, you can click or tap **Exit** to cancel self-calibration operation at any time.
3. After completing the self-calibration, restart the oscilloscope. In the **Horizontal** menu, select "Average" for the **Acquisition** item. Then click or tap the input field of the Averages item to set the number of averages to 16 with the pop-up numeric keypad.
  4. Set the vertical scale of each channel to 2 mV/div and view the offset of the waveform of each channel. If the offset is greater than 0.5 div, check whether there are interference signals around you and whether the power source is well grounded. After that, perform self-calibration again.
  5. Click or tap **Close** to close the self-calibration information window.

## 4.2 Test Result Record

Record and keep the test result of each test. In the last chapter of this manual, a test result record form is provided. The form lists all the test items and their corresponding performance limits as well as spaces for users to record the test results.



### TIP

It is recommended that users photocopy the test record form before each test and record the test results in the copy so that the form can be used repeatedly.

## 4.3 Specifications

---

The specification of each test item is provided in this manual. For other technical parameters, refer to *DHO4000 Data Sheet* (download it from RIGOL website: [www.rigol.com](http://www.rigol.com)).



### TIP

All the specifications are valid only when the oscilloscope has been warmed up for more than 30 minutes.



## 5 Performance Verification Test

This chapter takes DHO4804 as an example to illustrate the performance verification test methods and procedures of DHO4000 series digital oscilloscope. This manual recommends the following test devices. You can also use other devices that fulfill the "Specification" in [Table 5.1 Test Devices](#).

**Table 5.1 Test Devices**

Device	Specification	Recommended Model
Oscilloscope Calibrator	3 mV to 4 V, $\pm 0.1\%$ accuracy	Fluke 9500B



### TIP

1. Make sure that the oscilloscope passes the self-test and the self-calibration is performed before executing the performance verification tests.
2. Make sure that the oscilloscope has been warmed up for at least 30 minutes before executing any of the following tests.
3. Please reset the instrument to the factory setting before or after executing any of the following tests.

## 5.1 Random Noise Test

This test tests the random noise for each channel in the Normal acquisition mode.

### 5.1.1 Specification

Random Noise, Typical (50 $\Omega$ Input Impedance, 4 GSa/s Sample Rate, 1 Mpts Memory Depth, 20 $\mu$ s Time Base)			
	DHO4204	DHO4404	DHO4804
100 $\mu$ V/div <sup>[1]</sup>	18 $\mu$ V <sub>rms</sub>	18 $\mu$ V <sub>rms</sub>	18 $\mu$ V <sub>rms</sub>
200 $\mu$ V/div <sup>[1]</sup>	18 $\mu$ V <sub>rms</sub>	18 $\mu$ V <sub>rms</sub>	18 $\mu$ V <sub>rms</sub>
500 $\mu$ V/div	56 $\mu$ V <sub>rms</sub>	72 $\mu$ V <sub>rms</sub> <sup>[2]</sup>	72 $\mu$ V <sub>rms</sub> <sup>[2]</sup>
1 mV/div	56 $\mu$ V <sub>rms</sub>	81 $\mu$ V <sub>rms</sub>	117 $\mu$ V <sub>rms</sub>
2 mV/div	57 $\mu$ V <sub>rms</sub>	82 $\mu$ V <sub>rms</sub>	118 $\mu$ V <sub>rms</sub>
5 mV/div	60 $\mu$ V <sub>rms</sub>	87 $\mu$ V <sub>rms</sub>	126 $\mu$ V <sub>rms</sub>
10 mV/div	137 $\mu$ V <sub>rms</sub>	203 $\mu$ V <sub>rms</sub>	319 $\mu$ V <sub>rms</sub>
20 mV/div	168 $\mu$ V <sub>rms</sub>	248 $\mu$ V <sub>rms</sub>	378 $\mu$ V <sub>rms</sub>
50 mV/div	243 $\mu$ V <sub>rms</sub>	365 $\mu$ V <sub>rms</sub>	593 $\mu$ V <sub>rms</sub>
100 mV/div	385 $\mu$ V <sub>rms</sub>	601 $\mu$ V <sub>rms</sub>	1.1 mV <sub>rms</sub>

**Random Noise, Typical (50  $\Omega$  Input Impedance, 4 GSa/s Sample Rate, 1 Mpts Memory Depth, 20  $\mu$ s Time Base)**

200 mV/div	1.9 mV <sub>rms</sub>	2.8 mV <sub>rms</sub>	4.3 mV <sub>rms</sub>
500 mV/div	2.6 mV <sub>rms</sub>	3.9 mV <sub>rms</sub>	7 mV <sub>rms</sub>
1 V/div	4 mV <sub>rms</sub>	7 mV <sub>rms</sub>	10 mV <sub>rms</sub>

**Noise Floor, Typical (1 M $\Omega$  Input Impedance, 4 GSa/s Sample Rate, 1 Mpts Memory Depth, 20  $\mu$ s Time Base)**

	DHO4204	DHO4404	DHO4804
100 $\mu$ V/div <sup>[1]</sup>	61 $\mu$ V <sub>rms</sub>	62 $\mu$ V <sub>rms</sub>	62 $\mu$ V <sub>rms</sub>
200 $\mu$ V/div <sup>[1]</sup>	64 $\mu$ V <sub>rms</sub>	65 $\mu$ V <sub>rms</sub>	65 $\mu$ V <sub>rms</sub>
500 $\mu$ V/div	71 $\mu$ V <sub>rms</sub>	80 $\mu$ V <sub>rms</sub> <sup>[2]</sup>	81 $\mu$ V <sub>rms</sub> <sup>[2]</sup>
1 mV/div	73 $\mu$ V <sub>rms</sub>	94 $\mu$ V <sub>rms</sub>	98 $\mu$ V <sub>rms</sub>
2 mV/div	76 $\mu$ V <sub>rms</sub>	96 $\mu$ V <sub>rms</sub>	102 $\mu$ V <sub>rms</sub>
5 mV/div	91 $\mu$ V <sub>rms</sub>	130 $\mu$ V <sub>rms</sub>	208 $\mu$ V <sub>rms</sub>
10 mV/div	92 $\mu$ V <sub>rms</sub>	131 $\mu$ V <sub>rms</sub>	209 $\mu$ V <sub>rms</sub>
20 mV/div	120 $\mu$ V <sub>rms</sub>	174 $\mu$ V <sub>rms</sub>	278 $\mu$ V <sub>rms</sub>
50 mV/div	205 $\mu$ V <sub>rms</sub>	307 $\mu$ V <sub>rms</sub>	515 $\mu$ V <sub>rms</sub>
100 mV/div	1.5 mV <sub>rms</sub>	2 mV <sub>rms</sub>	2.6 mV <sub>rms</sub>
200 mV/div	1.6 mV <sub>rms</sub>	2.3 mV <sub>rms</sub>	3.2 mV <sub>rms</sub>
500 mV/div	5.7 mV <sub>rms</sub>	8 mV <sub>rms</sub>	11 mV <sub>rms</sub>
1 V/div	6.7 mV <sub>rms</sub>	10 mV <sub>rms</sub>	14 mV <sub>rms</sub>
2 V/div	9.4 mV <sub>rms</sub>	14 mV <sub>rms</sub>	23 mV <sub>rms</sub>
5 V/div	46 mV <sub>rms</sub>	66 mV <sub>rms</sub>	101 mV <sub>rms</sub>
10 V/div	59 mV <sub>rms</sub>	87 mV <sub>rms</sub>	137 mV <sub>rms</sub>

**NOTE**


[1]: Measured with 20 MHz bandwidth limit.

[2]: Measured with 250 MHz bandwidth limit.

## 5.1.2 Test Procedures

**TIP**

Before test, disconnect the instrument from all the signal generators and keep the noise sources away from the instrument.

1. Press the front-panel  key to restore the oscilloscope to the default settings.

2. Click or tap the channel label at the bottom and the **Vertical** menu is displayed. Select 50  $\Omega$  for **Impedance** to set the input impedance of CH1 to 50  $\Omega$ . By default, the probe ratio is "1X".
3. Set the vertical scale to 100  $\mu\text{V}/\text{div}$ , and the 20 MHz bandwidth limit will be enabled automatically.
4. By default, the acquisition mode is "Normal", the sample rate is 4 GSa/s, the horizontal time base is 20  $\mu\text{s}$ , and the memory depth is 1 Mpts.
5. Click or tap the trigger label at the top of the screen. Set the trigger source to CH1.
6. In the **Measure** menu, click or tap **Vertical** measurement item to select "AC.RMS". The AC.RMS measurement result is displayed at the right section of the screen.
7. Click or tap the "Result" sidebar and then select Setting. Set **Count** to 100.
8. When the statistics count in the "Result" sidebar shows 100, read and record the AC.RMS value.
9. For the parameter setting, refer to *Test Record From*. Repeat Step 1-8 and test the AC.RMS value for different vertical scales, bandwidths, and impedances. The test results should be less than the max. value in the record form.

### 5.1.3 Test Record From

Vertical Scale	Bandwidth	Test Result	Maximum			Pass/Fail
			DHO4204	DHO4404	DHO4804	
<b>50 <math>\Omega</math></b>						
100 $\mu\text{V}/\text{div}$	20 MHz		18 $\mu\text{V}_{\text{rms}}$	18 $\mu\text{V}_{\text{rms}}$	18 $\mu\text{V}_{\text{rms}}$	
200 $\mu\text{V}/\text{div}$	20 MHz		18 $\mu\text{V}_{\text{rms}}$	18 $\mu\text{V}_{\text{rms}}$	18 $\mu\text{V}_{\text{rms}}$	
500 $\mu\text{V}/\text{div}$	250 MHz/ Full BW <sup>[1]</sup>		56 $\mu\text{V}_{\text{rms}}$	72 $\mu\text{V}_{\text{rms}}$	72 $\mu\text{V}_{\text{rms}}$	
1 mV/div	Full BW		56 $\mu\text{V}_{\text{rms}}$	81 $\mu\text{V}_{\text{rms}}$	117 $\mu\text{V}_{\text{rms}}$	
2 mV/div	Full BW		57 $\mu\text{V}_{\text{rms}}$	82 $\mu\text{V}_{\text{rms}}$	118 $\mu\text{V}_{\text{rms}}$	
5 mV/div	Full BW		60 $\mu\text{V}_{\text{rms}}$	87 $\mu\text{V}_{\text{rms}}$	126 $\mu\text{V}_{\text{rms}}$	
10 mV/div	Full BW		137 $\mu\text{V}_{\text{rms}}$	203 $\mu\text{V}_{\text{rms}}$	319 $\mu\text{V}_{\text{rms}}$	
20 mV/div	Full BW		168 $\mu\text{V}_{\text{rms}}$	248 $\mu\text{V}_{\text{rms}}$	378 $\mu\text{V}_{\text{rms}}$	
50 mV/div	Full BW		243 $\mu\text{V}_{\text{rms}}$	365 $\mu\text{V}_{\text{rms}}$	593 $\mu\text{V}_{\text{rms}}$	
100 mV/div	Full BW		385 $\mu\text{V}_{\text{rms}}$	601 $\mu\text{V}_{\text{rms}}$	1.1 mV <sub>rms</sub>	
200 mV/div	Full BW		1.9 mV <sub>rms</sub>	2.8 mV <sub>rms</sub>	4.3 mV <sub>rms</sub>	
500 mV/div	Full BW		2.6 mV <sub>rms</sub>	3.9 mV <sub>rms</sub>	7 mV <sub>rms</sub>	
1 V/div	Full BW		4 mV <sub>rms</sub>	7 mV <sub>rms</sub>	10 mV <sub>rms</sub>	
<b>1 M<math>\Omega</math></b>						

Vertical Scale	Bandwidth	Test Result	Maximum			Pass/Fail
			DHO4204	DHO4404	DHO4804	
100 $\mu\text{V}/\text{div}$	20 MHz		61 $\mu\text{V}_{\text{rms}}$	62 $\mu\text{V}_{\text{rms}}$	62 $\mu\text{V}_{\text{rms}}$	
200 $\mu\text{V}/\text{div}$	20 MHz		64 $\mu\text{V}_{\text{rms}}$	65 $\mu\text{V}_{\text{rms}}$	65 $\mu\text{V}_{\text{rms}}$	
500 $\mu\text{V}/\text{div}$	250 MHz/ Full BW <sup>[1]</sup>		71 $\mu\text{V}_{\text{rms}}$	80 $\mu\text{V}_{\text{rms}}$	81 $\mu\text{V}_{\text{rms}}$	
1 mV/div	Full BW		73 $\mu\text{V}_{\text{rms}}$	94 $\mu\text{V}_{\text{rms}}$	98 $\mu\text{V}_{\text{rms}}$	
2 mV/div	Full BW		76 $\mu\text{V}_{\text{rms}}$	96 $\mu\text{V}_{\text{rms}}$	102 $\mu\text{V}_{\text{rms}}$	
5 mV/div	Full BW		91 $\mu\text{V}_{\text{rms}}$	130 $\mu\text{V}_{\text{rms}}$	208 $\mu\text{V}_{\text{rms}}$	
10 mV/div	Full BW		92 $\mu\text{V}_{\text{rms}}$	131 $\mu\text{V}_{\text{rms}}$	209 $\mu\text{V}_{\text{rms}}$	
20 mV/div	Full BW		120 $\mu\text{V}_{\text{rms}}$	174 $\mu\text{V}_{\text{rms}}$	278 $\mu\text{V}_{\text{rms}}$	
50 mV/div	Full BW		205 $\mu\text{V}_{\text{rms}}$	307 $\mu\text{V}_{\text{rms}}$	515 $\mu\text{V}_{\text{rms}}$	
100 mV/div	Full BW		1.5 mV <sub>rms</sub>	2 mV <sub>rms</sub>	2.6 mV <sub>rms</sub>	
200 mV/div	Full BW		1.6 mV <sub>rms</sub>	2.3 mV <sub>rms</sub>	3.2 mV <sub>rms</sub>	
500 mV/div	Full BW		5.7 mV <sub>rms</sub>	8 mV <sub>rms</sub>	11 mV <sub>rms</sub>	
1 V/div	Full BW		6.7 mV <sub>rms</sub>	10 mV <sub>rms</sub>	14 mV <sub>rms</sub>	
2 V/div	Full BW		9.4 mV <sub>rms</sub>	14 mV <sub>rms</sub>	23 mV <sub>rms</sub>	
5 V/div	Full BW		46 mV <sub>rms</sub>	66 mV <sub>rms</sub>	101 mV <sub>rms</sub>	
10 V/div	Full BW		59 mV <sub>rms</sub>	87 mV <sub>rms</sub>	137 mV <sub>rms</sub>	

**NOTE**

[1]: Test DHO4204 with full bandwidth 200 MHz; test DHO4404/DHO4804 with 250 MHz bandwidth limit.

## 5.2 Impedance Test

### 5.2.1 Specification

Input Impedance	
Analog Channel	1 M $\Omega$ : 0.99 M $\Omega$ to 1.01 M $\Omega$
	50 $\Omega$ : 49.5 $\Omega$ to 50.5 $\Omega$

## 5.2.2 Test Connection Diagram

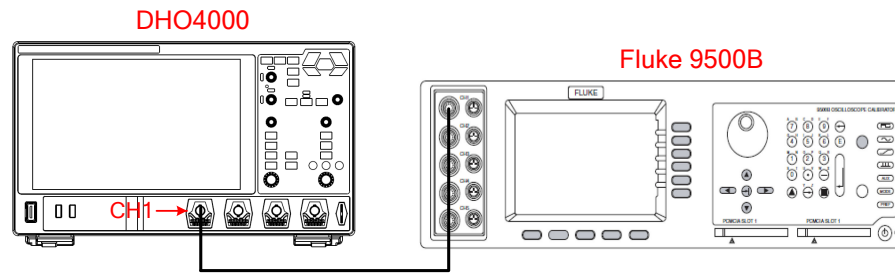


Figure 5.1 Input Impedance Test Connection Diagram

## 5.2.3 Test Procedures



### WARNING

Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

### Impedance test when the input impedance is 1 M $\Omega$

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.1*.
2. Configure the oscilloscope:
  - a. To enable the channel, perform any of the following operations:
    - Click or tap the channel status label at the bottom of the screen to enable CH1.
    - Press the front-panel 1 key to enable the channel.
    - In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.
  - b. In the **Vertical** menu, select 1 M $\Omega$  under **Impedance** to set the input impedance of CH1 to 1 M $\Omega$ .
  - c. Set the vertical scale of CH1 to 50 mV/div.
3. Turn on Fluke 9500B; set its impedance to 1 M $\Omega$  and select the resistance measurement function. Read and record the resistance measured.
4. Adjust the vertical scale of CH1 to 500 mV/div; read and record the resistance measured.

5. Turn off CH1. Measure the resistances of CH2, CH3, and CH4 respectively using the method above and record the measurement results.

### Impedance test when the input impedance is 50 $\Omega$

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.1*.
2. Configure the oscilloscope:
  - a. Use the method illustrated above to turn on CH1.
  - b. Set the input impedance of CH1 to 50  $\Omega$ .
  - c. Set the vertical scale of CH1 to 100 mV/div.
3. Turn on Fluke 9500B; set its impedance to 50  $\Omega$  and select the resistance measurement function. Read and record the resistance measured.
4. Adjust the vertical scale of CH1 to 500 mV/div; read and record the resistance measured.
5. Turn off CH1. Measure the resistances of CH2, CH3, and CH4 respectively using the method above and record the measurement results.

## 5.2.4 Test Record From

### 1 M $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
	500 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
CH2	50 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
	500 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
CH3	50 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
	500 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
CH4	50 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	
	500 mV/div		0.99 M $\Omega$ to 1.01 M $\Omega$	

### 50 $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
	500 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
CH2	50 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
	500 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH3	50 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
	500 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
CH4	50 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	
	500 mV/div		49.5 $\Omega$ to 50.5 $\Omega$	

## 5.3 Input Capacitance Test

### 5.3.1 Specification

Input Capacitance	
Specification	19 pF $\pm$ 3 pF

### 5.3.2 Test Connection Diagram

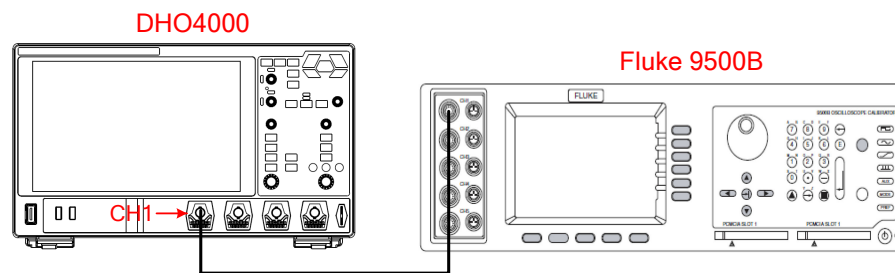


Figure 5.2 Input Capacitance Test Connection Diagram

### 5.3.3 Test Procedures



#### WARNING

Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.2*.
2. Configure the oscilloscope:
  - a. To enable CH1, perform any of the following operations:
    - Click or tap the channel status label at the bottom of the screen to enable CH1.
    - Press the front-panel 1 key to enable the channel.

- In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.
  - b. In the **Vertical** menu, select 1 M $\Omega$  under **Impedance** to set the input impedance of CH1 to 1 M $\Omega$ .
  - c. Set the vertical scale of CH1 to 50 mV/div.
3. Turn on Fluke 9500B; set its impedance to 1 M $\Omega$  and select the capacitance measurement function. Read and record the capacitance measured.
  4. Adjust the vertical scale of CH1 to 500 mV/div; read and record the capacitance measured.
  5. Turn off CH1. Measure the capacitances of CH2, CH3, and CH4 respectively using the method above and record the measurement results.

### 5.3.4 Test Record From

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	
CH2	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	
CH3	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	
CH4	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	

## 5.4 DC Gain Accuracy Test

### 5.4.1 Specification

DC Gain Accuracy	
Specification	$\pm 2\%$ x Full Scale



## 5.4.2 Test Connection Diagram

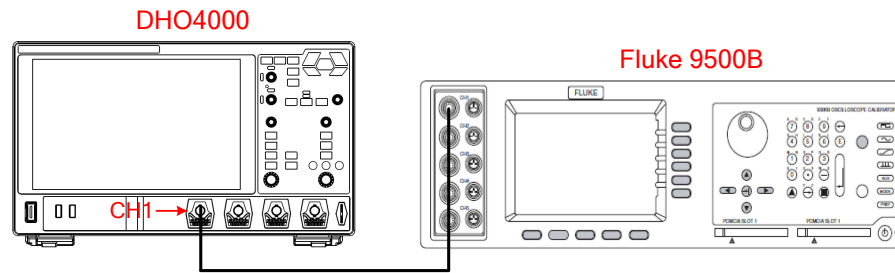


Figure 5.3 DC Gain Accuracy Test Connection Diagram

## 5.4.3 Test Procedures



### WARNING

Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

### DC gain accuracy test when the input impedance is 1 M $\Omega$

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.3*.
2. Set the impedance of Fluke 9500B to 1 M $\Omega$ .
3. Output a DC signal with +3 mVdc voltage (Vout1) via Fluke 9500B.
4. Configure the oscilloscope:
  - a. To enable CH1, perform any of the following operations:
    - Click or tap the channel status label at the bottom of the screen to enable CH1.
    - Press the front-panel 1 key to enable the channel.
    - In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.
  - b. Click or tap the channel status label at the bottom of the screen. Then the **Vertical** menu is displayed. Click or tap **Probe** to enter the **Probe** setting menu. Set the probe attenuation ratio to "1X".
  - c. In the **Vertical** menu, click or tap 1 M $\Omega$  under **Impedance** to set the input impedance of CH1 to 1 M $\Omega$ .

- d. Set the vertical scale to 1 mV/div.
  - e. Set the horizontal time base to 1  $\mu$ s/div.
  - f. Set the vertical offset to 0.
  - g. In the **Horizontal** menu, select "Average" for the **Acquisition** item. Then click or tap the input field of **Averages** to set the number of averages to 32 with the pop-up numeric keypad.
  - h. Adjust the trigger level to prevent the signals from being triggered by mistake.
5. In the **Measure** menu, click or tap **Vertical** measurement item to select "Vavg". The Vavg result is displayed in the "Result" sidebar at the right side of the screen. Read and record the measurement result of Vavg1.
  6. Adjust Fluke 9500B to make it output a DC signal with -3 mVdc voltage (Vout2).
  7. Enable the average measurement function. Read and record Vavg2.
  8. Calculate the relative error of this vertical scale:  $|(V_{avg1} - V_{avg2}) - (V_{out1} - V_{out2})| / \text{Fill Scale} \times 100\%$ .
  9. Keep the other settings of the oscilloscope unchanged.
    - a. Set the vertical scale to 2 mV/div, 5 mV/div, 10 mV/div, 20 mV/div, 50 mV/div, 100 mV/div, 200 mV/div, 500 mV/div, 1 V/div, 2 V/div, 5 V/div, and 10 V/div.
    - b. Adjust the output voltage of Fluke 9500B to 3 x the current vertical scale and -3 x the current vertical scale respectively.
    - c. Repeat Step 3-7 and record the test results.
    - d. Calculate the relative error of each vertical scale:  $|(V_{avg1} - V_{avg2}) - (V_{out1} - V_{out2})| / \text{Full Scale} \times 100\%$ .
  10. Turn off CH1. Test the relative error of each scale of CH2, CH3, and CH4 respectively using the method above and record the test results.

#### **DC gain accuracy test when the input impedance is 50 $\Omega$**

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.3*.
2. Turn on Fluke 9500B and set its impedance to 50  $\Omega$ .
3. Output a DC signal with +3 mV voltage (Vout1) via Fluke 9500B.
4. Configure the oscilloscope:

- a. To enable CH1, perform any of the following operations:
  - b. Set the probe attenuation ratio to "1X".
  - c. Set the input impedance of CH1 to 50  $\Omega$ .
  - d. Set the vertical scale to 1 mV/div.
  - e. Set the horizontal time base to 1  $\mu$ s/div.
  - f. Set the vertical offset to 0.
  - g. In the **Horizontal** menu, select "Average" for the **Acquisition** item. Then click or tap the input field of **Averages** to set the number of averages to 32 with the pop-up numeric keypad.
  - h. Adjust the trigger level to prevent the signals from being triggered by mistake.
5. Test the relative error of each scale of CH1 (except 2 V/div, 5 V/div, and 10 V/div) according to Step 5-9 specified in *DC gain accuracy test when the input impedance is 1 M $\Omega$*  and record the test results.
  6. Turn off CH1. Test the relative error of each scale of CH2, CH3, and CH4 respectively using the method above and record the test results.

## 5.4.4 Test Record From

### 1 M $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
CH1	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
	2 V/div				$\leq 2\%$	
	5 V/div				$\leq 2\%$	
10 V/div				$\leq 2\%$		
CH2	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
	1 V/div				≤2%	
	2 V/div				≤2%	
	5 V/div				≤2%	
	10 V/div				≤2%	
CH3	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
	1 V/div				≤2%	
	2 V/div				≤2%	
	5 V/div				≤2%	
	10 V/div				≤2%	
CH4	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
	1 V/div				≤2%	
	2 V/div				≤2%	
	5 V/div				≤2%	
	1 mV/div				≤2%	
	5 mV/div				≤2%	
	10 V/div				≤2%	

50  $\Omega$  Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
CH1	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
CH2	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
CH3	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
CH4	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
	500 mV/div				≤2%	
	1 V/div				≤2%	

**NOTE**

[1]: The calculation formula is  $[(V_{avg1} - V_{avg2}) - (V_{out1} - V_{out2})] / \text{Full Scale} \times 100\%$ ; wherein,  $V_{out1}$  is 3 x the current vertical scale and  $V_{out2}$  is -3 x the current vertical scale.

## 5.5 DC Offset Accuracy Test

### 5.5.1 Specification

DC Offset Accuracy	
Specification	<p>≤200 mV/div (<math>\pm 0.1 \text{ div} \pm 2 \text{ mV} \pm 1.5\%</math> of the offset value)</p> <p>&gt;200 mV/div (<math>\pm 0.1 \text{ div} \pm 2 \text{ mV} \pm 1.0\%</math> of the offset value)</p>

### 5.5.2 Test Connection Diagram

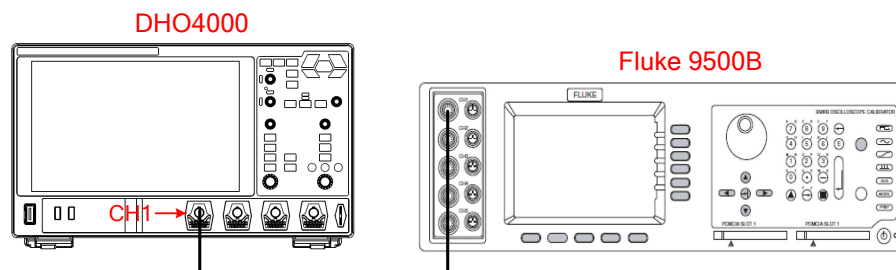


Figure 5.4 DC Offset Accuracy Test Connection Diagram

### 5.5.3 Test Procedures




**WARNING**

Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.4*.
2. Set the impedance of Fluke 9500B to 1 MΩ.

### 3. Configure the oscilloscope:

- a. Press the front-panel  key to restore the oscilloscope to the default settings.
- b. Click or tap the channel status label at the bottom of the screen. The **Vertical** menu is displayed. Select 1 MΩ for **Impedance** to set the input impedance of CH1 to 1 MΩ.
- c. Set the vertical scale to 100 μV/div.
- d. Click or tap the **BW Limit** drop-down button to select "20 M".
- e. Set the offset to 0.5 V, as shown in *Test Record From*. Close the Vertical menu.
- f. Click or tap the horizontal label at the top of the screen. Then the **Horizontal** menu is displayed. In this menu, set the time base to 1 ms/div. Select "Average" for the **Acquisition** item. Then click or tap the input field of the **Averages** item to set the number of averages to 16 with the pop-up numeric keypad. Close the Horizontal menu.
- g. Click or tap the trigger label at the top of the screen. Set the trigger source to AC Line.
- h. Adjust the trigger level to prevent the signals from being triggered by mistake.

### 4. Set the output of Fluke 9500B to -0.5 V.

5. In the **Measure** menu, click or tap **Vertical** measurement item to select "Vavg". The Vavg result is displayed in the "Result" sidebar at the right side of the screen. Read and record the measurement result of Vavg1.

6. Set the vertical offset of the oscilloscope to 0 V.

7. Set the output of Fluke 9500B to 0 V. Read the value from the "Result" sidebar and record the measurement result.

8. Repeat Step 2-7. Measure and record the average results of different impedances, vertical scales and offsets according to *Test Record From*.

## 5.5.4 Test Record From

Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
CH1, 1 MΩ, 20 MHz BW	100 μV/div	500 mV		-509.51 mV	-490.49 mV
	100 μV/div	0 V		-2.01 mV	2.01 mV
	100 μV/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV

Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
	5 V/div	-100 V		98.49 V	101.50 V
CH1, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH2, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
5 V/div	-100 V		98.49 V	101.50 V	
CH2, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH3, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV



Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
	5 V/div	-100 V		98.49 V	101.50 V
CH3, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH4, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
	5 V/div	-100 V		98.49 V	101.50 V
CH4, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V

## 5.6 Bandwidth Test

### 5.6.1 Specification

Bandwidth			
Amplitude Loss <sup>[1]</sup>	DHO4204	200 MHz	-3 dB, all channels mode
	DHO4404	400 MHz	-3 dB, all channels mode
	DHO4804	800 MHz (50 Ω) 500 MHz (1 MΩ)	-3 dB, single channel mode and half channels mode

#### NOTE

[1]: Amplitude Loss (dB) =  $20 \times \lg (V_{rms2}/V_{rms1})$ ; wherein,  $V_{rms1}$  is the measurement result of amplitude effective value at 1MHz and  $V_{rms2}$  is the measurement result of amplitude effective value at full bandwidth.

### 5.6.2 Test Connection Diagram

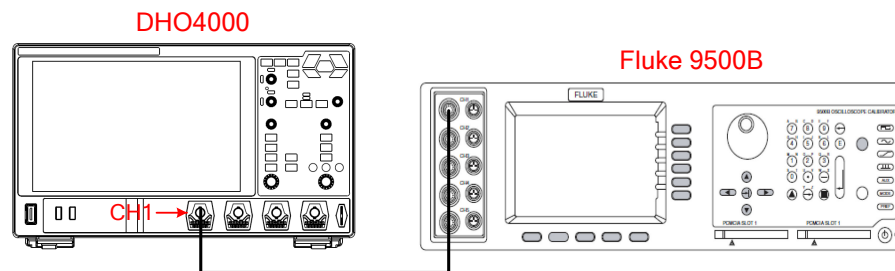


Figure 5.5 Bandwidth Test Connection Diagram

### 5.6.3 Test Procedures

 


#### WARNING

 
Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

#### Bandwidth test when the input impedance is 1 MΩ

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.5*.
2. Turn on Fluke 9500B and set its impedance to 1 MΩ.
3. Configure the oscilloscope:

- a. To enable CH1, perform any of the following operations:
    - Click or tap the channel status label at the bottom of the screen to enable CH1.
    - Press the front-panel  key to enable the channel.
    - In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.
  - b. Click or tap the channel status label of CH1 at the bottom of the screen. Then the **Vertical** menu is displayed. Click or tap **Probe** to enter the **Probe** setting menu. Set the probe attenuation ratio to "1X".
  - c. In the **Vertical** menu, select 1 MΩ under **Impedance** to set the input impedance of CH1 to 1 MΩ.
  - d. Set the vertical scale to 50 mV/div.
  - e. Set the vertical offset to 0 V. Then close the **Vertical** menu.
  - f. Click or tap the horizontal label at the top of the screen. Then the **Horizontal** menu is displayed. In this menu, you can set the horizontal time base to 500 ns/div.
  - g. Set the horizontal position to 0 s. Close the **Horizontal** menu.
  - h. Set the trigger level to 0 V.
4. Output a Sine signal with 1 MHz frequency and 6 div amplitude (e.g. 50 mV/div vertical scale, 300 mVpp amplitude Sine signal) via the Fluke 9500B. Adjust the horizontal time base to display five cycles of the waveforms on the screen.
  5. In the **Measure** menu, click or tap **Vertical** measurement item to select "AC.RMS". The AC.RMS measurement result is displayed in the "Result" sidebar at the right section of the screen. Read the value and record the measurement result as Vrms1.
  6. Use the Fluke 9500B to output a Sine signal with the maximum bandwidth of the oscilloscope and 6 div amplitude. The bandwidth frequency differs for different oscilloscope models. For details, please refer to *Specification*. Adjust the horizontal time base to display five cycles of the waveforms on the screen.
  7. Check the AC.RMS "Result" sidebar at the right section of the screen. Read and record the data as Vrms2.
  8. Calculate the amplitude loss with the following formula: Amplitude Loss (dB) = 20 x lg (Vrms2/Vrms1).
  9. Repeat Step 2-7. Measure Vrms1 and Vrms2, and calculate the amplitude loss of 500 mV/div vertical scale.
  10. Turn off CH1. Measure CH2, CH3, and CH4 respectively using the method above and record the measurement results.

### Bandwidth test when the input impedance is 50 $\Omega$

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in [Figure 5.5](#).
2. Turn on Fluke 9500B and set its impedance to 50  $\Omega$ .
3. Configure the oscilloscope:
  - a. To enable CH1, perform any of the following operations:
    - Click or tap the channel status label at the bottom of the screen to enable CH1.
    - Press the front-panel  key to enable the channel.
    - In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.
  - b. Click or tap the channel status label of CH1 at the bottom of the screen. Then the **Vertical** menu is displayed. Click or tap **Probe** to enter the **Probe** setting menu. Set the probe attenuation ratio to "1X".
  - c. In the **Vertical** menu, click or tap 50  $\Omega$  under **Impedance** to set the input impedance of CH1 to 50  $\Omega$ .
  - d. Set the vertical scale to 100 mV/div.
  - e. Set the vertical offset to 0 V. Then close the **Vertical** menu.
  - f. Click or tap the horizontal label at the top of the screen. Then the **Horizontal** menu is displayed. In this menu, you can set the horizontal time base to 500 ns/div.
  - g. Set the horizontal position to 0 s. Close the **Horizontal** menu.
  - h. Set the trigger level to 0 V.
4. Output a Sine signal with 1 MHz frequency and 6 div amplitude (e.g. 100 mV/div vertical scale, 600 mVpp amplitude Sine signal) via the Fluke 9500B. Adjust the horizontal time base to display five cycles of the waveforms on the screen.
5. In the **Measure** menu, click or tap **Vertical** measurement item to select "AC.RMS". The AC.RMS measurement result is displayed in the "Result" sidebar at the right section of the screen. Read the value and record the measurement result as Vrms1.
6. Use the Fluke 9500B to output a Sine signal with the maximum bandwidth of the oscilloscope and 6 div amplitude. The bandwidth frequency differs for different oscilloscope models. For details, please refer to [Specification](#). Adjust the horizontal time base to display five cycles of the waveforms on the screen.
7. Check the AC.RMS "Result" sidebar at the right section of the screen. Read and record the data as Vrms2.

8. Calculate the amplitude loss with the following formula:  $\text{Amplitude Loss (dB)} = 20 \times \lg (V_{\text{rms}2}/V_{\text{rms}1})$ .
9. Repeat Step 2-7. Measure  $V_{\text{rms}1}$  and  $V_{\text{rms}2}$ , and calculate the amplitude loss of 500 mV/div vertical scale.
10. Turn off CH1. Measure CH2, CH3, and CH4 respectively using the method above and record the measurement results.

## 5.6.4 Test Record From

### 1 M $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		$V_{\text{rms}1}$	$V_{\text{rms}2}$	Amplitude Loss <sup>[1]</sup>		
CH1	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH2	50 mV/div				-3 dB to 3 dB	
	50 mV/div				-3 dB to 3 dB	
CH3	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH4	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	

### 50 $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		$V_{\text{rms}1}$	$V_{\text{rms}2}$	Amplitude Loss <sup>[1]</sup>		
CH1	100 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH2	100 mV/div				-3 dB to 3 dB	
	50 mV/div				-3 dB to 3 dB	
CH3	100 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH4	100 mV/div				-3 dB to 3 dB	

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		V <sub>rms1</sub>	V <sub>rms2</sub>	Amplitude Loss <sup>[1]</sup>		
	500 mV/div				-3 dB to 3 dB	

**NOTE**

[1]: Amplitude Loss (dB) = 20 x lg (V<sub>rms2</sub>/V<sub>rms1</sub>); wherein, V<sub>rms1</sub> is the measurement result of amplitude effective value at 1MHz and V<sub>rms2</sub> is the measurement result of amplitude effective value at full bandwidth.

## 5.7 Time Base Accuracy Test

### 5.7.1 Specification

Time Base Accuracy <sup>[1]</sup>	
Specification	±(1.5 ppm + 1 ppm <sup>[2]</sup> /year x Number of Years that the Instrument Has Been Used <sup>[3]</sup> )

**NOTE**

[1]: Typical.

[2]: Clock Drift.

[3]: For the number of years that the instrument has been used, please calculate it according to the date in the verification certificate provided when the instrument leaves factory.

### 5.7.2 Test Connection Diagram

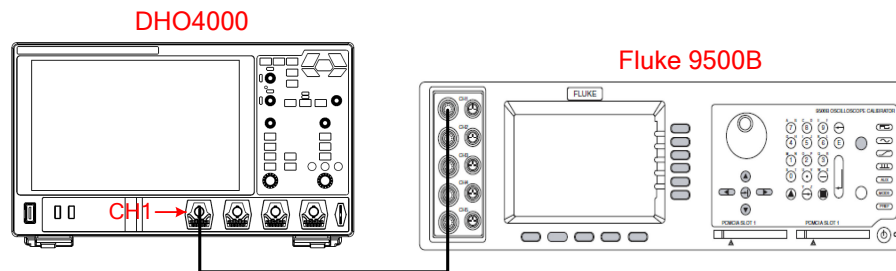


Figure 5.6 Time Base Accuracy Test Connection Diagram


### 5.7.3 Test Procedures



**WARNING**

 
Before connecting, disconnecting, or moving the test hookup, disable the output of the signal generator to avoid causing the dangerous voltage.

1. Connect the active head of Fluke 9500B to CH1 of the oscilloscope, as shown in *Figure 5.6*.
2. Output a Sine signal with 10 MHz frequency and 1 Vpp amplitude via Fluke 9500B.
3. Configure the oscilloscope:

a. Press the front-panel  key to restore the oscilloscope to the default settings.

b. To enable CH1, perform any of the following operations:

- Click or tap the channel status label at the bottom of the screen to enable CH1.

- Press the front-panel  key to enable the channel.

- In the **Vertical** menu, select the CH1 tab. Select **ON** for the **Display** item to turn CH1 on.

c. Click or tap the channel status label of CH1 at the bottom of the screen. Then the **Vertical** menu is displayed. Click or tap **Probe** to enter the **Probe** setting menu. Set the probe attenuation ratio to "1X".

d. In the **Vertical** menu, select 1 MΩ under **Impedance** to set the input impedance of CH1 to 1 MΩ.


e. Set the vertical scale to 200 mV/div.

f. Set the vertical offset to 0 V. Then close the **Vertical** menu.

g. Click or tap the horizontal label at the top of the screen. Then the **Horizontal** menu is displayed. In this menu, you can set the horizontal time base to 1 ns/div.

h. Set the horizontal position to 1 ms. Close the **Horizontal** menu.

i. Click or tap the trigger label at the top of the screen. Set the trigger level to 0 V.

4. Click or tap  > **Cursor**. Then the "Result" sidebar is displayed at the right section of the screen. Click or tap the "Result" sidebar and select **Setting** in the pop-up window. In the **Mode** item, select **Manual** to enable the manual cursor measurement function. Then measure the offset ( $\Delta T$ ) of the middle point of the signal (namely the crossing point of the rising edge of the current signal and the trigger level line) relative to the screen center and record the measurement result.

5. Calculate the time base accuracy, namely the ratio of  $\Delta T$  to the horizontal position of the oscilloscope. For example, if the offset measured is 1 ns, then the time base accuracy is  $1 \text{ ns}/1 \text{ ms} = 1 \text{ ppm}$ .
6. Calculate the time base accuracy limit by using the following formula:  $\pm(1.5 \text{ ppm} + 1 \text{ ppm/year} \times \text{Number of Years that the Instrument Has Been Used})$ .

#### 5.7.4 Test Record From

Channel	Test Result $\Delta T$	Calculation Result <sup>[1]</sup>	Limit	Pass/Fail
CH1			$\pm(1.5 \text{ ppm} + 1 \text{ ppm/year} \times \text{Number of Years that the Instrument Has Been Used}^{[2]})$	

#### NOTE

[1]: Calculation Result = Test Result  $\Delta T/1 \text{ ms}$ .

[2]: For the number of years that the instrument has been used, please calculate it according to the date in the verification certificate provided when the instrument leaves factory.



## 6 Appendix: Test Record Form

### RIGOL DHO4000 Series Digital Oscilloscope Performance Verification Test Record Form

Model: \_\_\_\_\_ Tested by: \_\_\_\_\_ Test Date: \_\_\_\_\_

#### Random Noise Test Record Form

Vertical Scale	Bandwidth	Test Result	Maximum			Pass/Fail
			DHO4204	DHO4404	DHO4804	
<b>50 Ω</b>						
100 μV/div	20 MHz		18 μV <sub>rms</sub>	18 μV <sub>rms</sub>	18 μV <sub>rms</sub>	
200 μV/div	20 MHz		18 μV <sub>rms</sub>	18 μV <sub>rms</sub>	18 μV <sub>rms</sub>	
500 μV/div	250 MHz/ Full BW <sup>[1]</sup>		56 μV <sub>rms</sub>	72 μV <sub>rms</sub>	72 μV <sub>rms</sub>	
1 mV/div	Full BW		56 μV <sub>rms</sub>	81 μV <sub>rms</sub>	117 μV <sub>rms</sub>	
2 mV/div	Full BW		57 μV <sub>rms</sub>	82 μV <sub>rms</sub>	118 μV <sub>rms</sub>	
5 mV/div	Full BW		60 μV <sub>rms</sub>	87 μV <sub>rms</sub>	126 μV <sub>rms</sub>	
10 mV/div	Full BW		137 μV <sub>rms</sub>	203 μV <sub>rms</sub>	319 μV <sub>rms</sub>	
20 mV/div	Full BW		168 μV <sub>rms</sub>	248 μV <sub>rms</sub>	378 μV <sub>rms</sub>	
50 mV/div	Full BW		243 μV <sub>rms</sub>	365 μV <sub>rms</sub>	593 μV <sub>rms</sub>	
100 mV/div	Full BW		385 μV <sub>rms</sub>	601 μV <sub>rms</sub>	1.1 mV <sub>rms</sub>	
200 mV/div	Full BW		1.9 mV <sub>rms</sub>	2.8 mV <sub>rms</sub>	4.3 mV <sub>rms</sub>	
500 mV/div	Full BW		2.6 mV <sub>rms</sub>	3.9 mV <sub>rms</sub>	7 mV <sub>rms</sub>	
1 V/div	Full BW		4 mV <sub>rms</sub>	7 mV <sub>rms</sub>	10 mV <sub>rms</sub>	
<b>1 MΩ</b>						
100 μV/div	20 MHz		61 μV <sub>rms</sub>	62 μV <sub>rms</sub>	62 μV <sub>rms</sub>	
200 μV/div	20 MHz		64 μV <sub>rms</sub>	65 μV <sub>rms</sub>	65 μV <sub>rms</sub>	
500 μV/div	250 MHz/ Full BW <sup>[1]</sup>		71 μV <sub>rms</sub>	80 μV <sub>rms</sub>	81 μV <sub>rms</sub>	
1 mV/div	Full BW		73 μV <sub>rms</sub>	94 μV <sub>rms</sub>	98 μV <sub>rms</sub>	
2 mV/div	Full BW		76 μV <sub>rms</sub>	96 μV <sub>rms</sub>	102 μV <sub>rms</sub>	
5 mV/div	Full BW		91 μV <sub>rms</sub>	130 μV <sub>rms</sub>	208 μV <sub>rms</sub>	
10 mV/div	Full BW		92 μV <sub>rms</sub>	131 μV <sub>rms</sub>	209 μV <sub>rms</sub>	
20 mV/div	Full BW		120 μV <sub>rms</sub>	174 μV <sub>rms</sub>	278 μV <sub>rms</sub>	
50 mV/div	Full BW		205 μV <sub>rms</sub>	307 μV <sub>rms</sub>	515 μV <sub>rms</sub>	
100 mV/div	Full BW		1.5 mV <sub>rms</sub>	2 mV <sub>rms</sub>	2.6 mV <sub>rms</sub>	
200 mV/div	Full BW		1.6 mV <sub>rms</sub>	2.3 mV <sub>rms</sub>	3.2 mV <sub>rms</sub>	

Vertical Scale	Bandwidth	Test Result	Maximum			Pass/Fail
			DHO4204	DHO4404	DHO4804	
500 mV/div	Full BW		5.7 mV <sub>rms</sub>	8 mV <sub>rms</sub>	11 mV <sub>rms</sub>	
1 V/div	Full BW		6.7 mV <sub>rms</sub>	10 mV <sub>rms</sub>	14 mV <sub>rms</sub>	
2 V/div	Full BW		9.4 mV <sub>rms</sub>	14 mV <sub>rms</sub>	23 mV <sub>rms</sub>	
5 V/div	Full BW		46 mV <sub>rms</sub>	66 mV <sub>rms</sub>	101 mV <sub>rms</sub>	
10 V/div	Full BW		59 mV <sub>rms</sub>	87 mV <sub>rms</sub>	137 mV <sub>rms</sub>	

**NOTE**

[1]: Test DHO4204 with full bandwidth/200 MHz limit; test DHO4404/DHO4804 with 250 MHz bandwidth limit.

**Impedance Test Record Form: 1 MΩ Input Impedance**

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		0.99 MΩ to 1.01 MΩ	
	500 mV/div		0.99 MΩ to 1.01 MΩ	
CH2	50 mV/div		0.99 MΩ to 1.01 MΩ	
	500 mV/div		0.99 MΩ to 1.01 MΩ	
CH3	50 mV/div		0.99 MΩ to 1.01 MΩ	
	500 mV/div		0.99 MΩ to 1.01 MΩ	
CH4	50 mV/div		0.99 MΩ to 1.01 MΩ	
	500 mV/div		0.99 MΩ to 1.01 MΩ	

**Impedance Test Record Form: 50 Ω Input Impedance**

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		49.5 Ω to 50.5 Ω	
	500 mV/div		49.5 Ω to 50.5 Ω	
CH2	50 mV/div		49.5 Ω to 50.5 Ω	
	500 mV/div		49.5 Ω to 50.5 Ω	
CH3	50 mV/div		49.5 Ω to 50.5 Ω	
	500 mV/div		49.5 Ω to 50.5 Ω	
CH4	50 mV/div		49.5 Ω to 50.5 Ω	
	500 mV/div		49.5 Ω to 50.5 Ω	

**Input Capacitance Test Record Form**

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
CH1	50 mV/div		19 pF ± 3 pF	
	500 mV/div		19 pF ± 3 pF	
CH2	50 mV/div		19 pF ± 3 pF	

Channel	Vertical Scale	Test Result	Limit	Pass/Fail
	500 mV/div		19 pF $\pm$ 3 pF	
CH3	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	
CH4	50 mV/div		19 pF $\pm$ 3 pF	
	500 mV/div		19 pF $\pm$ 3 pF	

DC Gain Accuracy Test Record Form: 1 M $\Omega$  Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
CH1	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
	2 V/div				$\leq 2\%$	
	5 V/div				$\leq 2\%$	
	10 V/div				$\leq 2\%$	
CH2	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	
	50 mV/div				$\leq 2\%$	
	100 mV/div				$\leq 2\%$	
	200 mV/div				$\leq 2\%$	
	500 mV/div				$\leq 2\%$	
	1 V/div				$\leq 2\%$	
	2 V/div				$\leq 2\%$	
	5 V/div				$\leq 2\%$	
	10 V/div				$\leq 2\%$	
CH3	1 mV/div				$\leq 2\%$	
	2 mV/div				$\leq 2\%$	
	5 mV/div				$\leq 2\%$	
	10 mV/div				$\leq 2\%$	
	20 mV/div				$\leq 2\%$	

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
	1 V/div				≤2%	
	2 V/div				≤2%	
	5 V/div				≤2%	
	10 V/div				≤2%	
CH4	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
	1 V/div				≤2%	
	2 V/div				≤2%	
	5 V/div				≤2%	
10 V/div				≤2%		

**NOTE**

[1]: The calculation formula is  $|(V_{avg1} - V_{avg2}) - (V_{out1} - V_{out2})| / \text{Full Scale} \times 100\%$ ; wherein,  $V_{out1}$  is 3 x the current vertical scale and  $V_{out2}$  is -3 x the current vertical scale.

**DC Gain Accuracy Test Record Form: 50 Ω Input Impedance**

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
CH1	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		Vavg1	Vavg2	Calculation Result <sup>[1]</sup>		
	1 V/div				≤2%	
CH2	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
		1 V/div				≤2%
CH3	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
		1 V/div				≤2%
CH4	1 mV/div				≤2%	
	2 mV/div				≤2%	
	5 mV/div				≤2%	
	10 mV/div				≤2%	
	20 mV/div				≤2%	
	50 mV/div				≤2%	
	100 mV/div				≤2%	
	200 mV/div				≤2%	
	500 mV/div				≤2%	
		1 V/div				≤2%

**NOTE**

[1]: The calculation formula is  $[(V_{avg1} - V_{avg2}) - (V_{out1} - V_{out2})] / \text{Full Scale} \times 100\%$ ; wherein,  $V_{out1}$  is 3 x the current vertical scale and  $V_{out2}$  is -3 x the current vertical scale.

## DC Offset Accuracy Test Record Form

Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
CH1, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
5 V/div	-100 V		98.49 V	101.50 V	
CH1, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH2, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
5 V/div	-100 V		98.49 V	101.50 V	
CH2, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V

Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH3, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
	5 V/div	-100 V		98.49 V	101.50 V
CH3, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V
CH4, 1 M $\Omega$ , 20 MHz BW	100 $\mu$ V/div	500 mV		-509.51 mV	-490.49 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV
	100 $\mu$ V/div	-500 mV		490.49 mV	509.51 mV
	10 mV/div	1 V		-1.01 V	-982.00 mV
	10 mV/div	0 V		-3.00 mV	3.00 mV
	10 mV/div	-1 V		982.00 mV	1.01 V
	200 mV/div	10 V		-10.17 V	-9.82 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-10 V		9.82 V	10.17 V
	1 V/div	20 V		-20.30 V	-19.69 V
	1 V/div	0 V		-102.00 mV	102.00 mV
	1 V/div	-20 V		19.69 V	20.30 V
	5 V/div	100 V		-101.50 V	-98.49 V
	5 V/div	0 V		-502.00 mV	502.00 mV
	5 V/div	-100 V		98.49 V	101.50 V
CH4, 50 $\Omega$ , 20 MHz BW	100 $\mu$ V/div	1 V		-1.01 V	-982.99 mV
	100 $\mu$ V/div	0 V		-2.01 mV	2.01 mV

Channel Setting	Vertical Scale	Offset	Test Result	Min.	Max.
	100 $\mu$ V/div	-1 V		982.99 mV	1.01 V
	200 mV/div	4 V		-4.08 V	-3.91 V
	200 mV/div	0 V		-22.00 mV	22.00 mV
	200 mV/div	-4 V		3.91 V	4.08 V

### Analog Bandwidth Test Record Form: 1 M $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		V <sub>rms1</sub>	V <sub>rms2</sub>	Amplitude Loss <sup>[1]</sup>		
CH1	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH2	50 mV/div				-3 dB to 3 dB	
	50 mV/div				-3 dB to 3 dB	
CH3	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH4	50 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	

#### NOTE

[1]: Amplitude Loss (dB) =  $20 \times \lg(V_{rms2}/V_{rms1})$ ; wherein, V<sub>rms1</sub> is the measurement result of amplitude effective value at 1MHz and V<sub>rms2</sub> is the measurement result of amplitude effective value at full bandwidth.

### Analog Bandwidth Test Record Form: 50 $\Omega$ Input Impedance

Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		V <sub>rms1</sub>	V <sub>rms2</sub>	Amplitude Loss <sup>[1]</sup>		
CH1	100 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	
CH2	100 mV/div				-3 dB to 3 dB	
	50 mV/div				-3 dB to 3 dB	
CH3	100 mV/div				-3 dB to 3 dB	



Channel	Vertical Scale	Test Result			Limit	Pass/Fail
		V <sub>rms1</sub>	V <sub>rms2</sub>	Amplitude Loss <sup>[1]</sup>		
	500 mV/div				-3 dB to 3 dB	
CH4	100 mV/div				-3 dB to 3 dB	
	500 mV/div				-3 dB to 3 dB	

**NOTE**

[1]: Amplitude Loss (dB) =  $20 \times \lg(V_{rms2}/V_{rms1})$ ; wherein, V<sub>rms1</sub> is the measurement result of amplitude effective value at 1MHz and V<sub>rms2</sub> is the measurement result of amplitude effective value at full bandwidth.

**Time Base Accuracy Test Record Form**

Channel	Test Result $\Delta T$	Calculation Result <sup>[1]</sup>	Limit	Pass/Fail
CH1			$\pm(1.5 \text{ ppm} + 1 \text{ ppm/year} \times \text{Number of Years that the Instrument Has Been Used}^{[2]})$	

**NOTE**

[1]: Calculation Result = Test Result  $\Delta T/1$  ms.

[2]: For the number of years that the instrument has been used, please calculate it according to the date in the verification certificate provided when the instrument leaves factory.

#### HEADQUARTER

**RIGOL TECHNOLOGIES CO., LTD.**  
No.8 Keling Road, New District, Suzhou,  
JiangSu, P.R.China  
Tel: +86-400620002  
Email: info@rigol.com

#### EUROPE

**RIGOL TECHNOLOGIES EU GmbH**  
Carl-Benz-Str.11  
82205 Gilching  
Germany  
Tel: +49(0)8105-27292-0  
Email: info-europe@rigol.com

#### NORTH AMERICA

**RIGOL TECHNOLOGIES, USA INC.**  
10220 SW Nimbus Ave.  
Suite K-7  
Portland, OR 97223  
Tel: +1-877-4-**RIGOL**-1  
Fax: +1-877-4-**RIGOL**-1  
Email: info@rigol.com

#### JAPAN

**RIGOL JAPAN CO., LTD.**  
5F,3-45-6,Minamiotsuka,  
Toshima-Ku,  
Tokyo,170-0005,Japan  
Tel: +81-3-6262-8932  
Fax: +81-3-6262-8933  
Email: info-japan@rigol.com

---

**RIGOL®** is the trademark of **RIGOL TECHNOLOGIES CO., LTD.** Product information in this document subject to update without notice. For the latest information about **RIGOL's** products, applications and services, please contact local **RIGOL** channel partners or access **RIGOL** official website: [www.rigol.com](http://www.rigol.com)